



Volkswagen > New Beetle > 1998 - 2005
Body Interior
70 - Interior trim

B-pillar trim, removing and installing

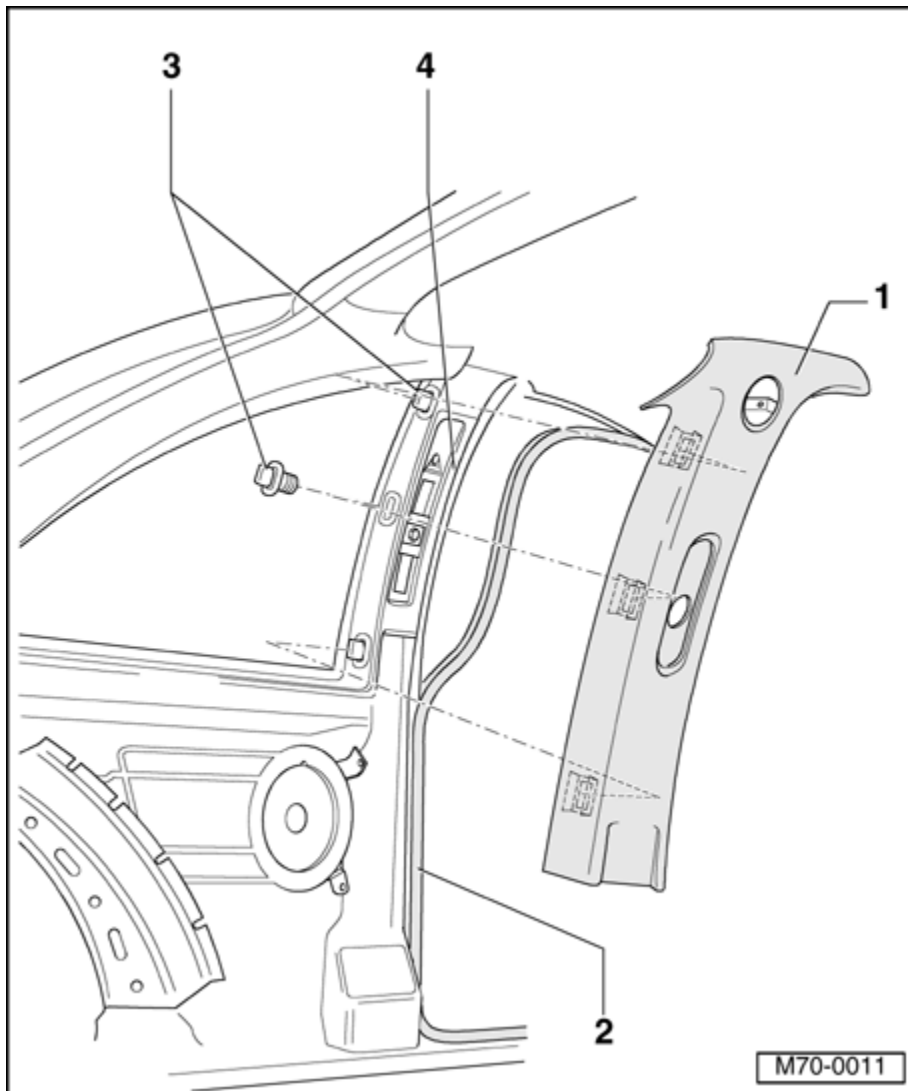

Removing

- Remove side panel trim => page [70-51](#).
- Remove relay anchorage for front seat belt => page [69-3](#).
- Remove door inner seal [-2-](#) from B-pillar [-4-](#).

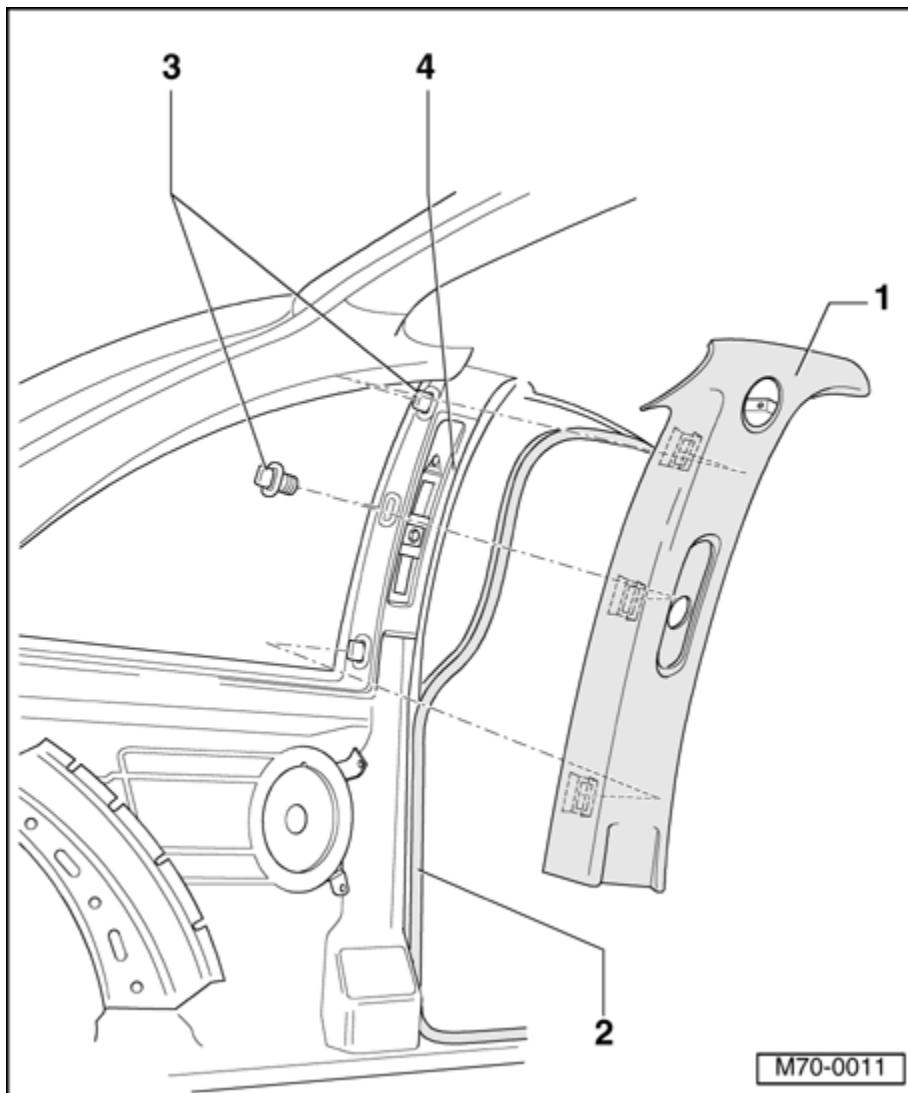

- Remove handle strap => page [68-51](#).
- Unclip B-pillar upper trim -[1](#)- to rear off B-pillar -[4](#)-.

Installing

Install in reverse order of removal.

Note:

- ♦ Check clips -[3](#)- before installing trim and replace as necessary.
- ♦ Make sure door inner seal is seated correctly after installing trim.